

1. Napięcie znamionowe, częstotliwość
2. Kąt świecenia
3. Żywotność
4. Współczynnik oddawania barw
5. Minimalna odległość od oświetlanego obiektu.
6. Do użytku wewnętrznego
7. Nie nadaje się jako lampa do roślin

8. Wymień uszkodzoną oprawę
9. Nieściemnialne
10. Ilość cykli ON/OFF
11. Współczynnik mocy
12. Opóźnienie po uruchomieniu
13. Klasa IP
14. Klasa ochrony przepięciowej


!!! UWAGA !!!

! Przed przystąpieniem montażu panelu uważnie przeczytaj poniższą instrukcję oraz zachowaj ją do użytku w przyszłości!



- Montaż panelu powinien dokonywać tylko wykwalifikowany specjalista.
- Przed przystąpieniem do montażu wyłącz zasilanie.
- Trzymaj z dala od dzieci!
- Chroń przed ogniem i wysokimi temperaturami - ryzyko eksplozji!
- Nie demontuj i nie modyfikuj produktu na własną rękę!
- Trzymaj z dala od wody i niekorzystnych warunków (opary, zapylenie itp.)
- Nie patrz bezpośrednio w źródło światła!
- Nie używaj produktu w przypadku jego uszkodzenia!
- W przypadku uszkodzenia przewodu należy zniszczyć oprawę!
- Informacje zawarte w niniejszej instrukcji mogą ulec zmianie bez wcześniejszego uprzedzenia.
- Zastrzegamy sobie prawo do zmian w konstrukcji produktu
- Nie ponosimy odpowiedzialności za wady/szkody wynikłe z niestosowania się do zaleceń niniejszej instrukcji.

INSTALACJA

- A) Wyłącz zasilanie i przygotuj otwory i zamontuj uchwyt.
- B) Podłącz zasilacz do instalacji elektrycznej.
- C) Przykręć panel do uchwyty.
- D) Włącz zasilanie i przetestuj panel.

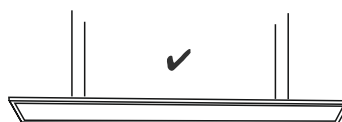

F) Prawidłowy sposób montażu panelu na linkach

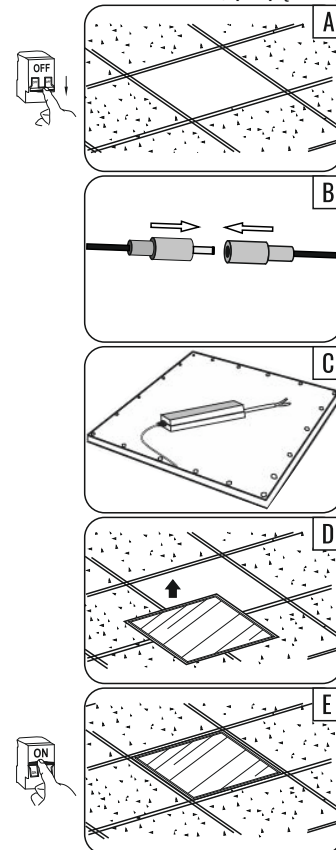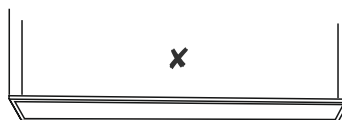

KONSERWACJA

- Przed konserwacją panelu odłącz zasilanie.
- Przed przystąpieniem do konserwacji upewnij się, że temperatura panelu pozwoli na jej wykonanie - produkt może ulec nagrzanu.
- Nie zakrywaj panelu.
- Nie ograniczaj dopływu powietrza.
- Do czyszczenia używaj tylko suchych i miękkich materiałów, nie stosuj środków chemicznych.
- Nie ma możliwości wymiany źródła światła w oprawie. W przypadku zużycia źródła światła należy wymienić całą oprawę.
- Aby dostać się do źródła światła odkręć śrubki z tyłu panelu.

Ten produkt należy zutylizować w sposób odpowiedzialny po zakończeniu jego eksploatacji. Proszę oddać do recyklingu w odpowiednie miejsce. Skontaktuj się lokalnymi władzami lub sprzedawcą, aby uzyskać informacje dotyczące recyklingu.




CCT

EC61778

CCT

EC61797

Źródło światła	1. Moc	40W, 45W, 50W	
	2. Barwa światła	3000K, 4000K, 6500K	
	3. Strumień świetlny	6800lm (3000K), 7200lm (4000K, 6500K)	
	4. Efektywność świetlna	120lm/W	
Panel	5. Strumień świetlny	5500lm (3000K), 6000lm (4000K, 6500K)	
	6. Kąt świecenia	110°	
	7. Napięcie wejściowe	AC 220-240V 50Hz	
	8. CRI	80	
	9. Klasa szczelności	IP20	
	10. Kolor ramki	Biały	Czarny
	11. Materiał ramki	STAL	
	12. Wymiary	295x1195x30mm	

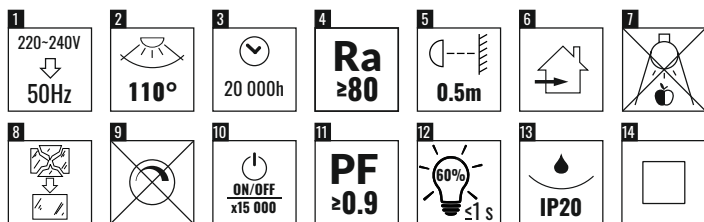

1. Rated voltage, frequency
2. Beam angle
3. Lifetime
4. Color rendering index
5. Min. distance from illuminated object
6. For indoor use only
7. Do not use as a grow light


8. Replace faulty cover
9. Non-dimmable
10. ON/OFF cycles
11. Power factor
12. Power up delay
13. IP rating
14. Appliance class

!!! WARNING !!!



- ! Read this manual before installation and keep it for future use.
- Panel installation should only be performed by qualified electrician.
- Turn off the power before installation.
- Keep away from children!
- Keep away from fire and high temperatures - explosion hazard!
- Do NOT disassemble the panel and do not modify it by yourself!
- Keep away from water and hazardous environment (vapor, dustiness etc.)
- Do NOT look directly into the light source!
- Do NOT use the product in case of damage!
- In case of damaging the cable, the luminaire must be destroyed.
- Information included in this document may undergo changes without prior warning.
- We reserve the right to apply changes in the construction of the product.
- We take no responsibility for faults/damages resulting from non-compliance with provided instructions.

INSTALLATION

- A) Turn off the power and prepare the holes and mount the bracket.
- B) Connect the power supply to the grid.
- C) Screw the panel to the bracket.
- D) Turn on the power and test the panel.

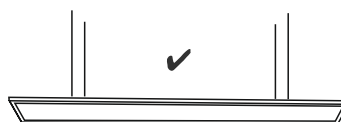

F) Prawidłowy sposób montażu panelu na linkach

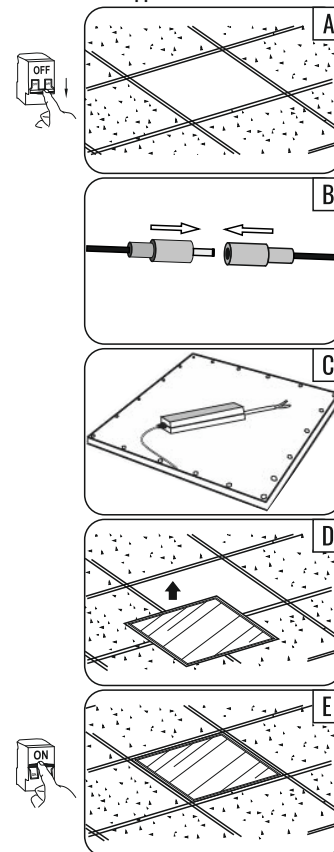**MAINTENANCE**

- Turn off the power before proceeding with maintenance.
- Before proceeding with maintenance, make sure the temperature of the panel is low enough to perform it.
- Do NOT cover the panel.
- Do NOT restrict the airflow.
- Use only dry and soft cloths, do NOT use chemicals to clean the product.
- The light source of the panel is non-replaceable. If the light source reaches it's lifetime, the whole luminaire should be replaced.
- To get to the light source, unscrew the screws on the back of the panel.

This product should be disposed of responsibly at the end of its life. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive).



		CCT	CCT
		EC61778	EC61797
Light source	1. Power	40W, 45W, 50W	
	2. Light temperature	3000K, 4000K, 6500K	
	3. Luminous flux	6800lm (3000K), 7200lm (4000K, 6500K)	
	4. Luminous efficacy	120lm/W	
Panel	5. Luminous flux	5500lm (3000K), 6000lm (4000K, 6500K)	
	6. Beam angle	110°	
	7. Rated voltage	AC 220-240V 50Hz	
	8. CRI	80	
	9. IP rating	IP20	
	10. Frame color	White	Black
	11. Frame material	IRON	
	12. Dimensions	295x1195x30mm	